



notes :  
 1) strap U4 to spare levels

- 2) U Point Allocation
- 1 -
  - 2 +
  - 3 Ring start
  - 4 VMB spare levels
  - 5 spare
  - 6 VMB all levels
  - 7 M
  - 8 CD2 contact
  - 9 P
  - 10 Dial tone
  - 11 Earth
  - 12 Battery
  - 13 spare
  - 14 NU tone
  - 15 Release alarm earth
  - 16 Busy tone

3) strap U8 to U10 to provide dial tone

4) The B3 contact may be connected between the CA relay and earth on some selectors

5) Some selectors have a two contact HX relay

Parkend - Incoming First Selector (modified from ATW600680 selector)		
DFR ex022d		
ISSUE D	27/08/2016	modification of ATW600680 type selector
ISSUE C	30/05/2016	modification of ATW37221 type selector
ISSUE B	12/05/2016	Two types of hi-speed relay used
ISSUE A	14/07/2008	Opening Issue