



- notes :
- 1) strap U4 to spare levels
 - 2) U Point Allocation
 - 1 -
 - 2 +
 - 3 Ring start
 - 4 VMB spare levels
 - 5 spare
 - 6 VMB all levels
 - 7 M
 - 8 CD2 contact
 - 9 P
 - 10 Dial tone
 - 11 Earth
 - 12 Battery
 - 13 spare
 - 14 NU tone
 - 15 Release alarm earth
 - 16 Busy tone
 - 3) strap U8 to U10 to provide dial tone
 - 4) The B3 contact may be connected between the CA relay and earth on some selectors
 - 5) Some selectors have a two contact HX relay

Parkend North - Incoming First Selector (modified from ATW600680 selector)		
DFR ex022d		
ISSUE D	27/08/2016	modification of ATW600680 type selector
ISSUE C	30/05/2016	modification of ATW37221 type selector
ISSUE B	12/05/2016	Two types of hi-speed relay used
ISSUE A	14/07/2008	Opening Issue