


Note : U points 9 and 11 make when relay set is removed

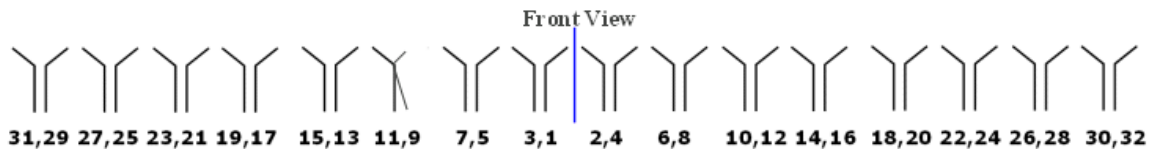

- | | |
|---|---|
| <ul style="list-style-type: none"> 1 From PA Output) 3 From PA Output) 5 SMP 7 CR1 9 Mic & PA signal earth 11 Earth, 24V+ 13 CR3 15 CR5 17 CR595 19 SPK GP1) 21 SPK GP1) 23 SPK GP2) 25 SPK GP2) 27 SPK GP3) 29 SPK GP3) 31 SMA | <ul style="list-style-type: none"> 2 1M in from preamp output4 4 24V - 6 2M in from preamp output 8 CR2 10 M 12 50V Batt - 14 CR4 16 18 IS 20 PA MIC 1) 22 PA MIC 1, eth) Unbalanced to amp aux 1 24 PA MIC 2) 26 PA MIC 2, eth) Unbalanced to amp aux 2 28 PA MIC 3) 30 PA MIC 3) Balanced to Mic input 32 SHP |
|---|---|

Black U points cabled to IDF and common services
 Blue U points cabled to Pre-amps or Amplifier
 Gold U points cabled to PA Tele Access Relay Set
 Purple U points cabled to 24V- Unit
 Cyan U points connected to microphone cables

Norchard - PA Audio Switching R/S U Points		
DFR pa009a		
ISSUE A	23/3/2012	Opening Issue
Dean Forest Railway		